DeLaval
MPC 680

No light No cow number No milking	Light on Milking going on Cow number
Light flashes fastly Alarm	Light flashes slowly Manual milking Cow number proposed

Button functions

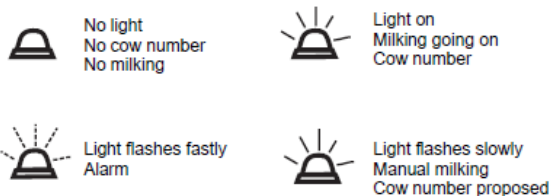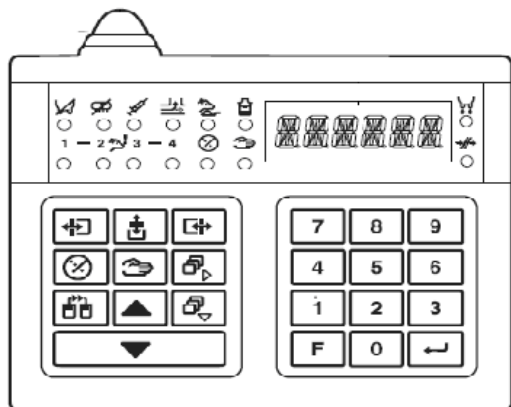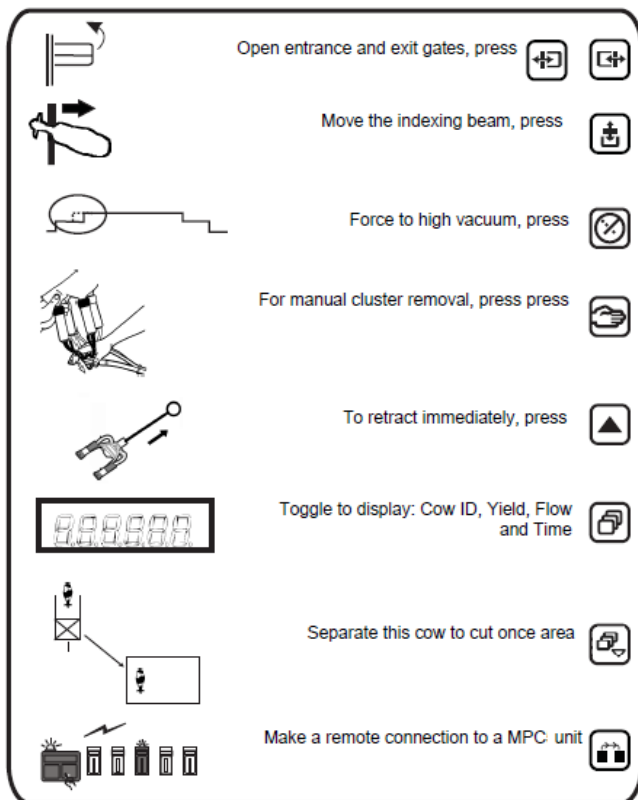|	
Open entrance and exit gates, press	🔲 🔲
Move the indexing beam, press	🔲
Force to high vacuum, press	🔲
For manual cluster removal, press press	🔲
To retract immediately, press	▲
Toggle to display: Cow ID, Yield, Flow and Time	🔲
Separate this cow to cut once area	🔲
Make a remote connection to a MPC· unit	🔲

Start milking session

Press **F 1** and **↑** ⇒ display

The display at all places will show the actual milking session number

Normal milking

Press **▼** to release the cluster

Prepare the cow for milking

(Automatic cluster removal will take place)

Press **F 5** and **↑** to confirm milk yield (full row)

After milking

Press 🖐 to release the cluster for cleaning

Press **F 8** and **↑** to release cluster (full row)

End milking session

Press **F 2** and **↑** ⇒

Attentions!

Don't milk this cow *Cluster is not released*	Press **long** to override ▼
Dump the milk from this cow *Cluster is not released*	
Treat this cow	
This cow will be separated	
Feed alarm	
Low yield alarm	
Remind codes 1-4	
Manual milking	
Forced high vacuum activated	
Flashes when flow is low Steady when flow is high	